

# OPERATION AND MAINTENANCE MANUAL

## FOR LP3-N Series Hydraulic Pneumatic Pump



### WREN Hydraulic

It is operating manual of LP3-N torque wrench air pump, please read carefully follow instructions、warnings and cautions before using the tools.

#### Safety Guide

The hydraulic torque wrench pump's safe usage requires correct operation and regular inspect. And the user is requested to follow always and carefully .


▲precaution to avoid direct loss in economic or property.

▲warning to avoid personal injury.

Please follow herein before!

When using, if something abnormal happens, please shut off the Air source immediately, and then consult WREN or WREN's agent.

1. When using, do not permit any person stand at the oil output in order to avoid personal injury and equipment damage. Please put the pump far away from the fire.
2. Make sure that the hose and quick coupler be connected before building up the pressure in order to avoid hydraulic fluid spouting out to cause personal injury.
3. The maximum operating pressure of this pump is 700Bar, WREN has set up the pressure to 700bar before selling this pump. Please do not adjust to a pressure higher than the maximum pressure which WREN has not set.
4. If this pump is used for operating other equipments, make sure the maximum operating pressure of the equipments will be less than 700Bar. Please adjust the pressure to which the equipment need, or else the equipment would be damaged.  
Please regulate the regulating valve as per manual item 6 and 7.
5. Make sure the power of the pump is shut off before repairing it.
6. Please shut off the switch before starting power; if the switch is on, the pressure may increase.
7. Please do not change any part of the pump; if it must be changed, please inform WREN or WREN's agent for help. Without allowance of WREN or its agent, any refit of it will be out of our warranty range.
8. Please do not fill the pump reservoir with too much oil, otherwise, the pressure of the reservoir will increase and the oil will spill over, so the reservoir will be broken and the environment will be polluted.
9. Please do not fill the pump reservoir with too much oil, otherwise, the pressure of the reservoir will increase and the oil will spill over, so the reservoir will be broken and the environment will be polluted.
10. The wrench and power pump are connected by a 700bar operating pressure, twin-line hose assembly. Each end of the hose will have one male and one female connector to assure proper interconnection between pump and wrench. Do not change any thread on the swivel joint arbitrarily. This is set by the manufacturer for safety purpose. Only professionally trainer can adjust.
11. Make sure the quick coupler is tightened; if the quick coupler is not tightened enough, the equipment will not work normally; if it is a synchronic system, the problem may cause one or several pieces of equipment out of order and the quick coupler may be broken and it may cause personal injury or equipment damage.
12. Please stand away from the position where the hydraulic oil may be spurt out; hydraulic oil may penetrate your hand and hurt you.
13. If the hydraulic oil splashed in your eyes, please immediately wash your eyes about 15 minutes with clean water, then you must go to hospital for help right now.
14. Please do not touch the pressurized hose; if the hydraulic oil splashed out, it will cause serious injury.

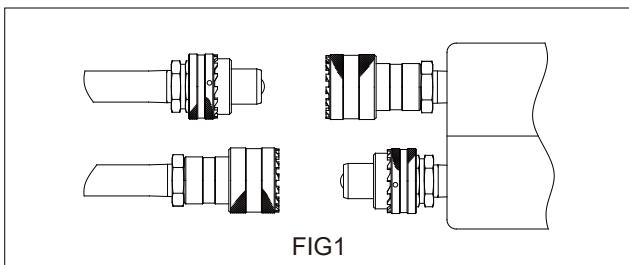

## PRECAUTION

1. Only WREN hydraulic special oil available.
2. Do not use pressure regulate valve as relief valve.
3. The used hydraulic oil should be put away according to the antipollution ordinance.

## DESCRIPTION

1. This pump is used for hydraulic torque wrench and fitted in integrated way, it is an independent hydraulic unit that mainly consists of pump, control valve, oil reservoir, motor, meter, control-line fitting, it has the peculiarity of small volume, light weight, simple composition, convenient operation, high working pressure. The pump can supply oil with one high and one low oil outlet at the same time, which could make a large quantity of oil outputting. On high pressure, the low pressure pump will automatically let oil return through the release flow valve, which can reduce power consumption, and the pressure of the outlet can be arbitrarily adjusted from 1000 to 10000 PSI.

2. Hydraulic oil for this pump: 46# anti-wear hydraulic oil.

3. Environmental temperature for using this pump: -10~60 °C

4. Please use WREN's high pressure hose, high pressure coupler, and so on. The maximum operation pressure of high pressure hose for this pump is 1000Bar; please choose suitable system for it.


5. If you need to use attached hydraulic product for pump, please contact WREN's engineers.

6. Please do not use this pump around the fire.

7. Please do not adjust the pressure valve arbitrarily to avoid personal injury or equipment damage due to high pressure.

## EXTERNAL DIMENSION AND DESCRIPTION OF PARTS

LP3-N

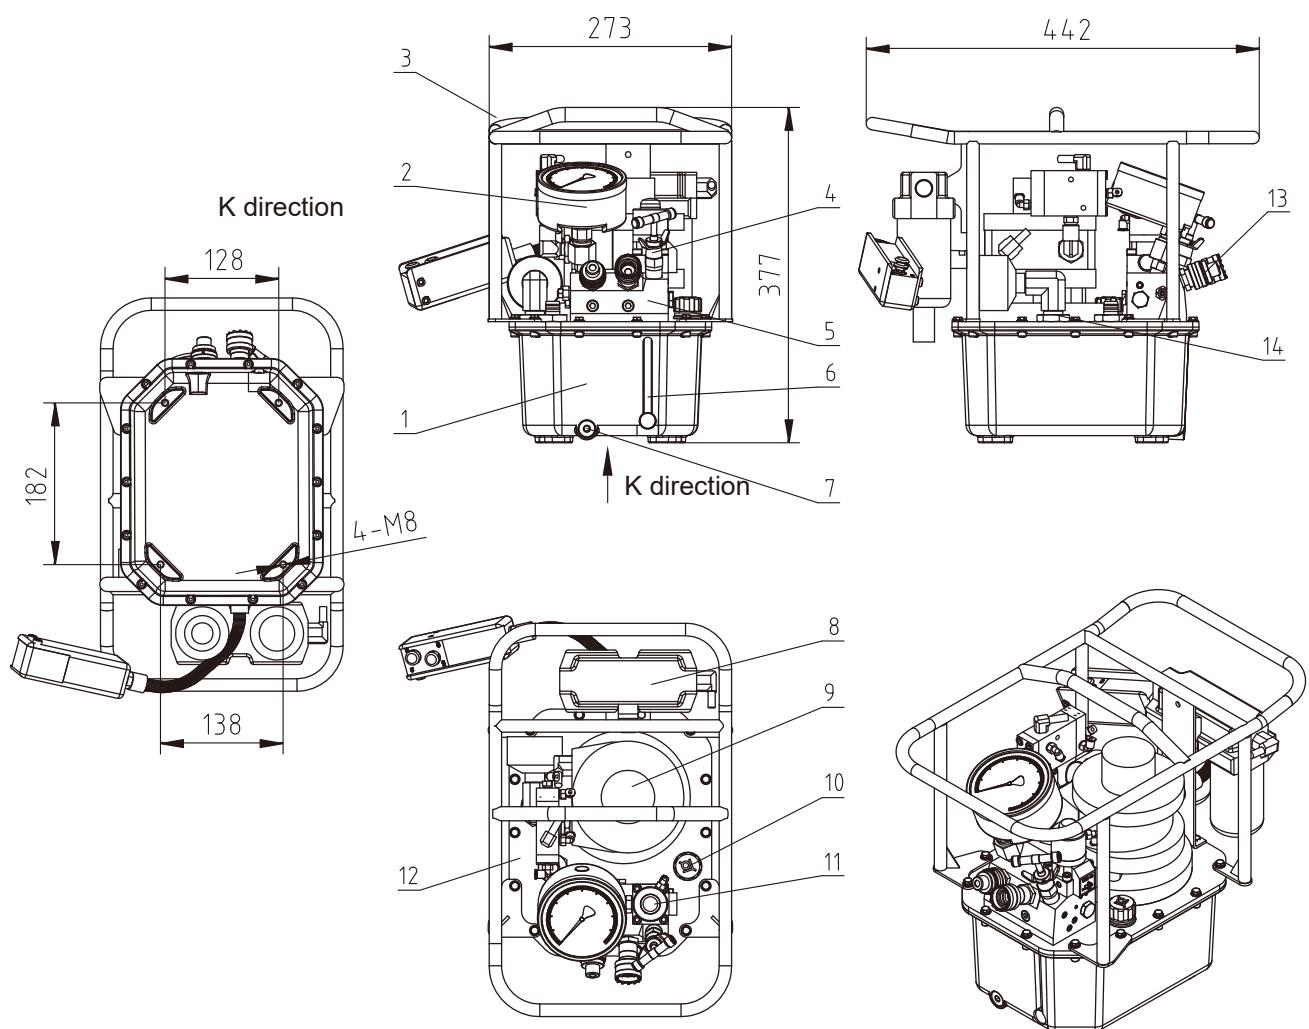

## DESCRIPTIONS OF PARTS

Item	Description	Item	Description
1	Oil Tank	8	Oil-water separator
2	Pressure Gauge	9	Air Motor
3	Protective Frame	10	Oil Filling Port
4	Pressure Regulating Valve	11	+two- position three way
5	Valve Block	12	Tank Plate
6	level indicator	13	Quick Coupling
7	Oil Releasing Port	14	Cooler

## DESCRIPTIONS OF PARTS

1. Oil tank: to store hydraulic oil, make sure there is enough oil to keep the pump working normally.
2. Pressure gauge: shows the working pressure of the hydraulic pump, the range is 1000bar.
3. Protective frame: installed on tank for carrying and protecting the hydraulic pump.
4. Pressure regulating valve: Adjust this valve to set the working pressure of the hydraulic pump. (The maximum working pressure is set at the factory, and the locking pressure is prohibited to adjust).
5. Valve Block: integrated module
6. level indicator: Observe the level of hydraulic oil to ensure the best use of oil; when the hydraulic oil is lower than the oil standard 1/3 position, the special hydraulic oil must be filled, otherwise the pump may be damaged.
7. Oil releasing port: screw plug G1/4", the hydraulic oil is discharged from the oil tank (used when replacing hydraulic oil).
8. Oil-water separator: remove the water in the compressed air, let the air motor increases the oil, make air motor life longer.
9. Air motor: Provides a power source.
10. Oil Filling port: realizes the discharge of hydraulic oil to the oil tank (used when replacing hydraulic oil); the oil cover is designed with ventilation hole function, unscrew the oil cover when filling oil, and has a filter inner to ensure no impurities enter oil tank; tighten the oil cover to ensure the air in system is discharged smoothly.
11. Two-position three-way pneumatic directional valve: pneumatic control makes hydraulic oil to change direction.
12. Tank Plate: Seal the tank.
13. Quick coupling: hydraulic oil output\return function, quick connection of oil hose; inner check valve;
14. Cooler: Forced cooling is implemented to reduce the oil temperature during operation of the pump, thus extending the working time and service life of the wrench.

## CHARACTERISTIC

1. LP3-N is three-stage pump. Pressure relief valve is assembled in the high pressure port .the rated pressure in the low pressure port is 5-7mpa,in the medium pressure outlet is set as 24 ~ 26Mpa,And the flow is 1.1 L/min under 70mpa.
2. Max operating pressure:70mpa
3. Double-Acting pump,can simultaneously use 2 torque wrenches
4. Motor:4~8Bar air pressure motor
5. Environmental temperature:-10~80°C
6. Reservoir dimension:442×273×377mm
7. Weight (No oil) :LP3-N :20.5Kg
8. Hydraulic oil:ISO VG 46#



When using a set of wrenches, another set of quick the metal cap.

## WARNING!!!

- 1.When operating, do not permit anyone stand at the oil output,The oil output must connect other components when adjusting the pressure.
- 2.When using, do not overpass the max operating pressure.
- 3.If need to check air motor , please shut off the air source.
- 4.When working, the oil back to oil reservoir may add the pressure. If open the cover plate, unnecessary injury and damage will happen.
- 5.Please do not operate without oil
- 6.Keep the clean of the pump,clean especially the oil inlet, quick couplers.
- 7.Suggestion: in the condition of not using the pump always, please remember to replace the hydraulic oil

## Warning signs

Warning flags are shown in the following table

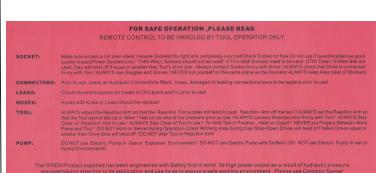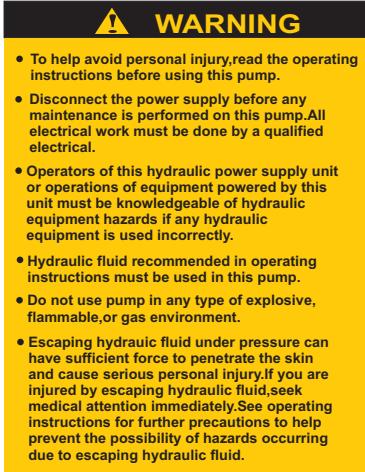Warning signs	meaning	paste position
	Please read the safety regulations	The tank side
	Warning	Tank of positive

## MAINTENANCE AND INSPECTION

### 1. The inspection before operating

(1).Please shut off the pump and inspect whether the position of the power connection is loose or not. If it is loose, please tighten it.

(2).Please inspect whether the hydraulic oil in the oil reservoir is enough or not, if it is not enough, please fill the oil in time.

(3).The pump is still working when the direction of the air valve is changed, please build up pressure and inspect whether the whole equipment is normal or not.

(4).Please inspect whether the hoses and other equipments are leaky or not, if this happened, please inspect to find the reason and repair it or replace it.

### 2. The inspection in operation

When inspecting the following items, if there is abnormal situation, please shut off the pump and repair it.

(1)Please inspect whether there are abnormal condition or not in the course of raising the pressure.

(2)Please inspect whether the hoses and other equipments are leaky or not.

(3)Please inspect whether there is some abnormal noise, rocking and smell or not during the operation of the air motor.

(4)Please inspect whether the temperature of hydraulic oil is too high or not.

### 3.The inspection after finishing the operation of the pump.

(1)Making sure the pump must be turn down.

(2)Please inspect whether there are leaky or abnormal condition or not. If there is abnormal situation,please inspect to find the reason and repair it

(3)Please clean it after using the pump.

### 4.Refer to changing the hydraulic oil

The oil should be replaced once a year principally. If there are following abnormal conditions, please replace the oil immediately.

(1)If dust mixes with the oil, please replace the oil.

(2)If there is abnormal smell, please replace the oil.

(3)If the water mixes with the oil, the colour of the oil has been changed into milkiness, please replace the oil.

(4)If the colour of the oil has been changed into black-brown, please replace the oil.

### 5.The way replacing the hydraulic oil

(1)Please loosen the oil filler port of oil reservoir.

(2)Please take down the screw on the flank of the oil reservoir, let hydraulic oil out.

(3)Please clean the inner and filter of the oil reservoir.

Please install the screw and fill the oil reservoir with the hydraulic oil.

WARNING: If the oil splashes into your eyes, please wash with clean water for at least 15 minutes, and Then see doctor immediately. If the oil splashes to your skin, please wash it with clean water and soap.

WARNING: Waste hydraulic oil bellows to industrial waste, it should be dealt with by special companies.

## Noise/Vibration And Transport information


### 1、 Hydraulic pump noise declaration

1) Hydraulic pump noise value:  $\leq 70\text{db}$


### 2、 Hydraulic pump transport information.

1) Handle with care.

2) The shipment should be vertical upward, as shown in the FIG .

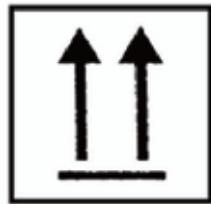


3) Product handling, generally using portable, car handling and lifting and moving, as shown in the FIG.

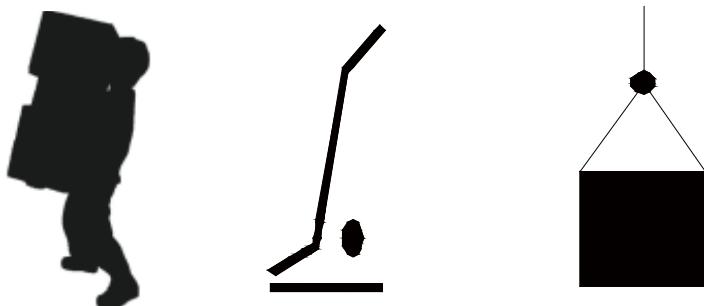

## OPERATION INSTRUCTIONS

1. LP3-N hydraulic power pump is designed for hydraulic torque wrench. There is a 2-way, 4-position Air control valve on the pump, port A is high pressure point, it can export the oil at the high pressure, and port B is low pressure point which can return the oil at the low pressure.
2. Please loosen the valve for adjusting pressure before operating.
3. Please connect the air line and press the air input valve on the flank of the pump to make the pump start working and oil exporting.
4. Please press the working button on the controller and adjust the pressure unit the working pressure reach to what you need, and then loosen the working button on the controller.
5. When the desired pressure is reached, the motor stops working, and the pressure will keep the same. When the pressure falls down, the motor starts to work again.
6. When the motor is working, if you press the "off" button on the pump, the motor stops working, the piston and pressure will also be stopped at the position when the motor stopped working, even if the pressure fell, the motor would not work again.
7. After operating, please press the rubber button on the top of the air control valve in order to release the pressure in hoses and equipments, then you can take down the hose and cover the Safety cap for the quick couplers.

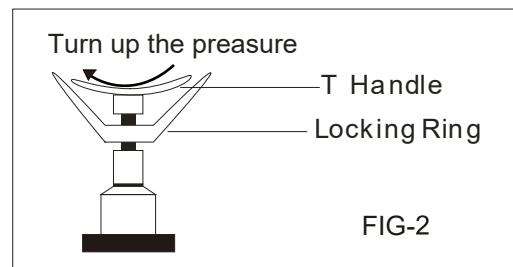


## TROUBLE SHOOTING GUIDE OF HYDRAULIC PUMP

The pump can't be started	The air pressure isn't suitable	Confirming whether the pressure is suitable for the pump's need
	The power hasn't be connected	Checked the input air, switch and distribution box and so on, and connect the air.
The system has no pressure	The quick coupler hasn't be connected to the correct position	Take down and reinstall it
	No oil in the oil reservoir	Fill in oil
	Not enough oil in the oil reservoir	Fill in oil
	If the system has a throttle and hand single-direction valve, please check if the valve are open	Open the throttle and hand single-direction valve, and make sure the system is a circle
After reinstalling the quick coupler, the system has no pressure	The quick coupler can't be connected to the correct position, which causes no pressure in the system	Take down the quick coupler, check if the ball is elastic with a rod, if it can't move, please knock it with a hammer to eliminate the mist hydraulic oil
Leakage in the quick coupler	The o ring and escape have worn out	Replace the quick coupler

The pressure can't reach to the set pressure	The relief valve is adjusted too low	Check with the gauge, and adjust the relief valve to the system set pressure
	Oil is mixed with water	Change oil
	Not enough oil in the reservoir	Fill in oil
	Suck in air to the system	Repeat operating the system with no load for several times to eliminate the air
	The throttle and hand single-direction valve haven't been tightened	Locking valve
	The throttle and hand single-direction valve haven't been adjusted to the correct position	Adjust to the correct position
	The throttle and hand single-direction valve have broken	Replace the valve
	There is foreign matter in the oil	Wash the pump valve and change clean oil
When using under static pressure, the pressure reduces slowly	The seal is out of control, please check all the seal	Replace the seal


## EXPLOSION OF THE PUMP MODULE

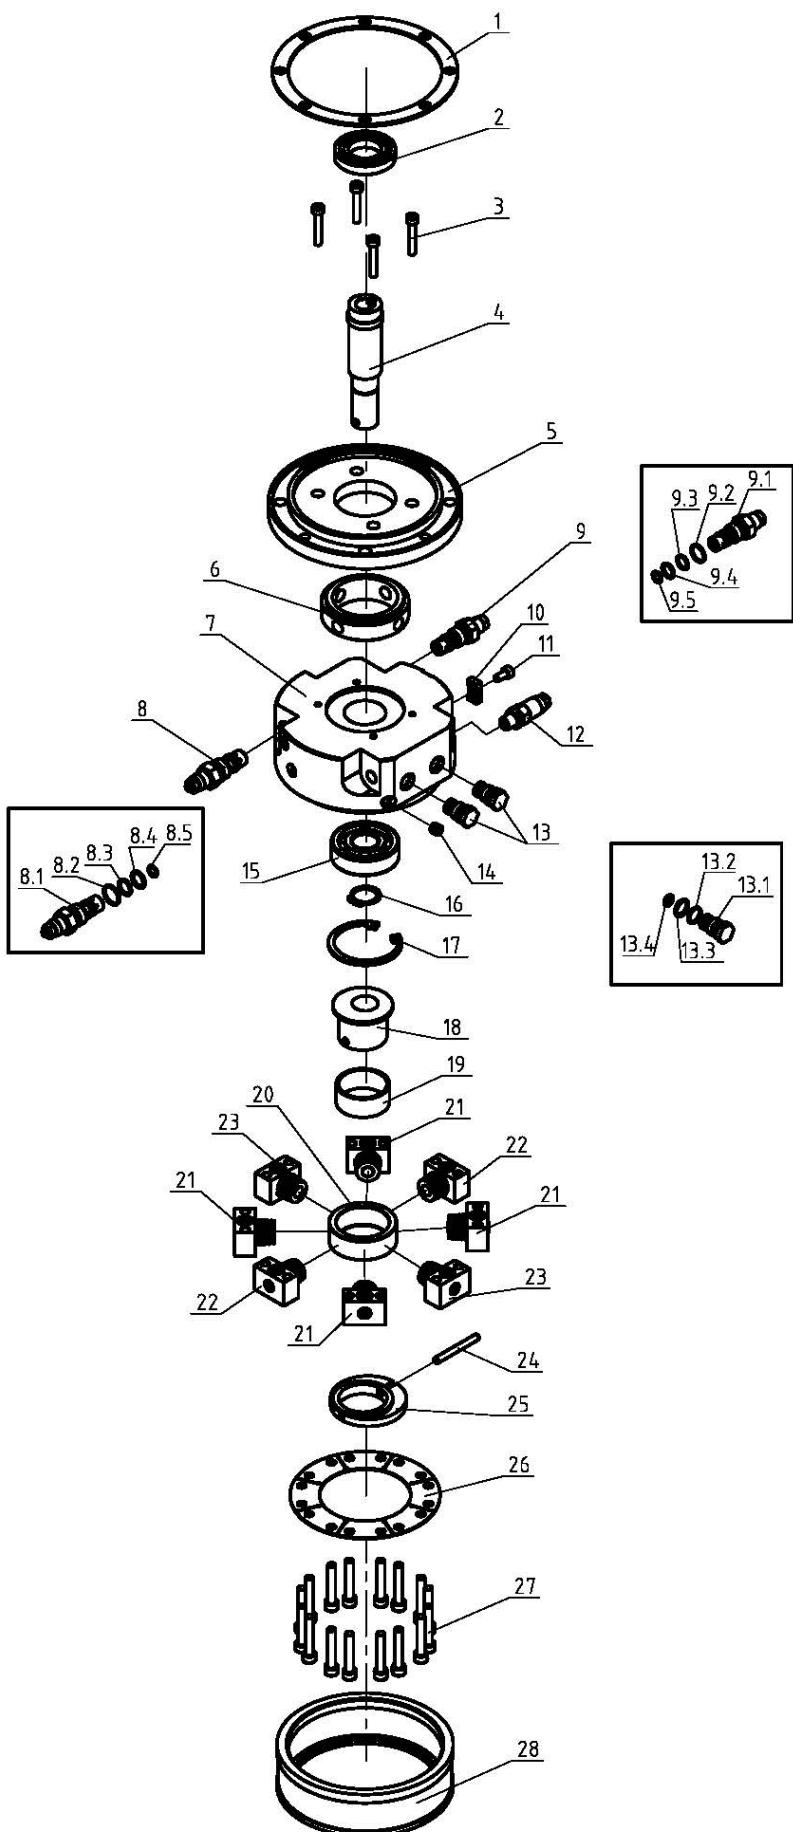

## Pump System


ITEM	DESCRIPTION	QTY
1	Seal Gasket	1
2	Ball Bearing	1
3	Screw	4
4	Pump shaft	1
5	Body Flange	1
6	Body Sleeve	1
7	Pump Body	1
8	Relief Valve Assembly	1
8.1	Relief Valve	1
8.2	O-Ring	1
8.3	Retaining Ring	1
8.4	O-Ring	1
8.5	O-Ring	1
9	Relief Valve Assembly	1
9.1	Relief Valve	1
9.2	O-Ring	1
9.3	Retaining Ring	1
9.4	O-Ring	1
9.5	O-Ring	1
10	Filter Fixer	1
11	Screw	1
12	Safety Valve Assembly	1
13	Check Valve Assembly	2
13.1	Check Valve	2
13.2	Retaining Ring	2
13.3	O-Ring	2
13.4	O-Ring	2
14	Plug Screw	12
15	Ball Bearing	1
16	Spring Clip	1
17	Spring Clip	1
18	Sleeve	1
19	Copper Sleeve	1
20	Bearing outer ring	1
21	Piston 12mm	4
22	Piston 7mm	2
23	Piston 7mm	2
24	Spring Pin	1
25	Block	1
26	Connecting Flange	1
27	Screw	16
28	Filter	1

## EXPLOSION OF THE TYPE WE VALVE SET MODULE

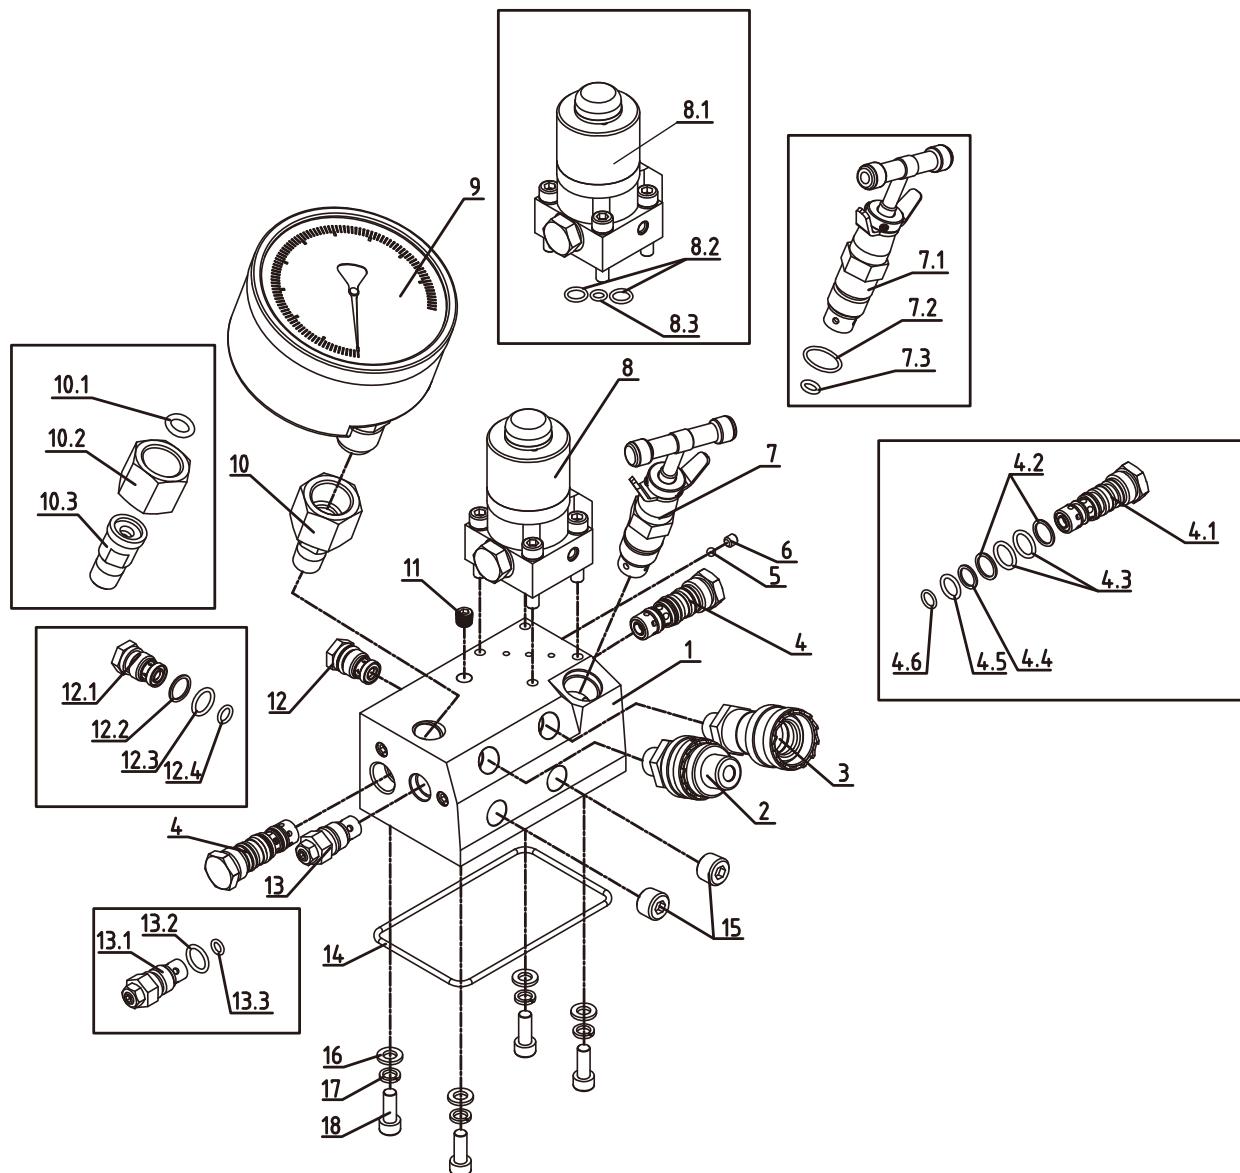


Item	Description	Quantity	Item	Description	Quantity
1	Valve Block	1	9	Gauge 100Mpa	1
2	Male Coupler	1	10	Connector	1
3	Famale Coupler	1	10.1	O-Ring	1
4	Reversing Valve	2	10.2	Connecting Fitting	1
4.1	Valve Body	1	10.3	Connecting Fitting	1
4.2	Retaining Ring	2	11	Screw Plug	13
4.3	O-Ring	2	12	Check Valve	1
4.4	Retaining Ring	1	12.1	Valve Body	1
4.5	O-Ring	1	12.2	Retaining Ring	1
4.6	O-Ring	1	12.3	O-Ring	1
5	Steel Ball	5	12.4	O-Ring	1
6	Screw	5	13	Low Pressure Valve	1
7	Regulating Valve	1	13.1	Valve Body	1
7.1	Valve Body	1	13.2	O-Ring	1
7.2	O-Ring	1	13.3	O-Ring	1
7.3	O-Ring	1	14	O-Ring	1
8	Air Direction Valve	1	15	Plug	2
8.1	Valve Body	1	16	Gasket	4
8.2	O-Ring	2	17	Spring Gasket	4
8.3	O-Ring	1	18	Screw	4

Drawing for Air pump handle

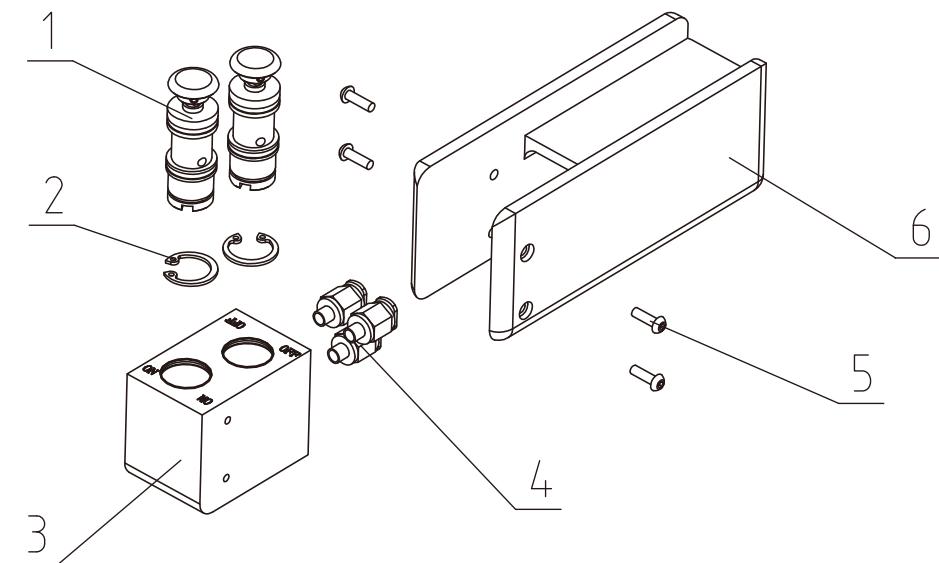

Item	Name	QTY	Item	Name	QTY
1	Air Button	2	4	Quick Connector	3
2	Clip	2	5	Screw	4
3	Valve Block	2	6	Handle	1

## HYDRAULIC PRINCIPLE

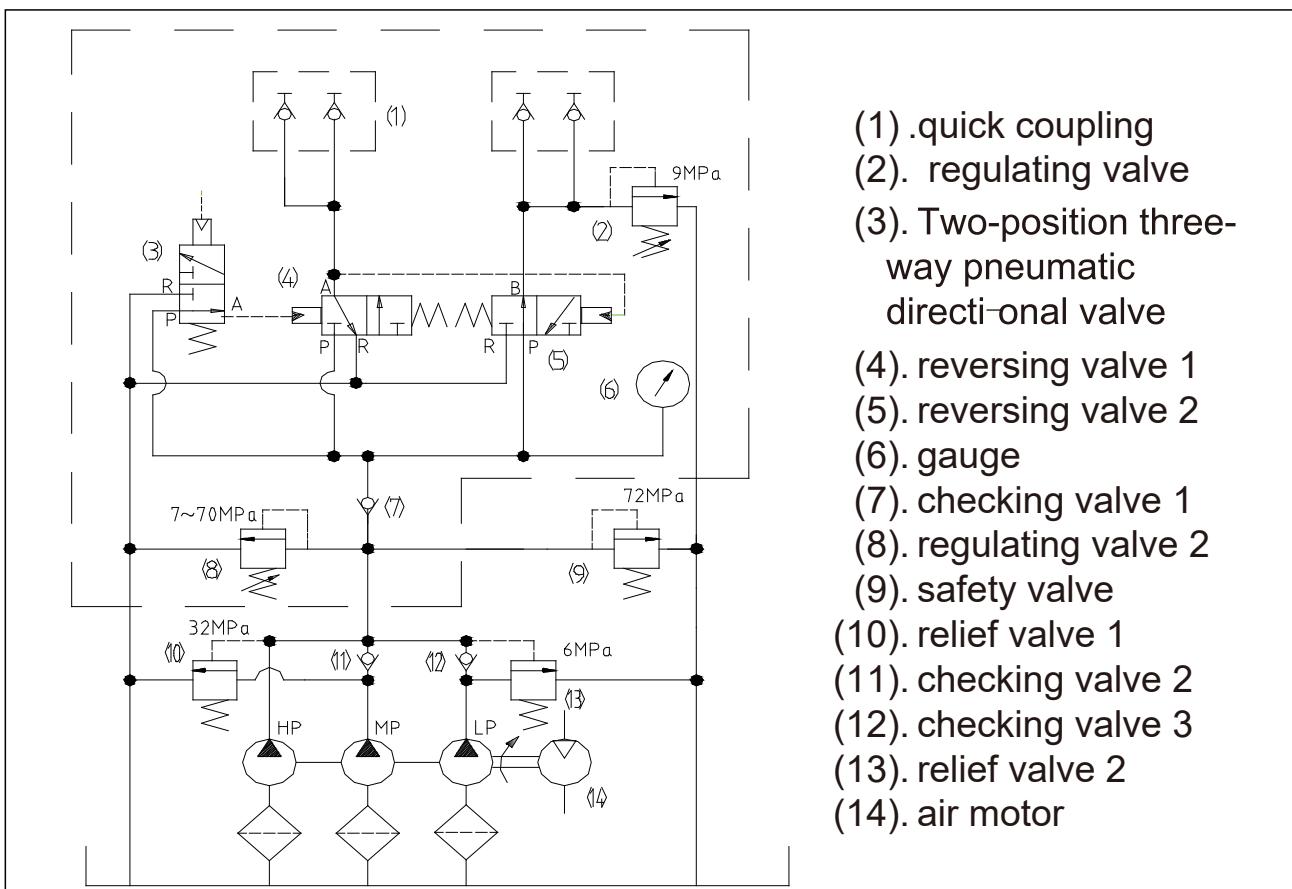


## WARNING FOR USING HIGH PRESSURE HOSE

1. Please use WREN's JH series high pressure hoses.
2. The minimum bending radius:  $R>120\text{mm}$ . Too small bending radius will destroy the high pressure hoses.
3. The maximum operating pressure is 70 mpa, and it is forbidden to overpass the pressure.
4. Do not tighten hoses excessively. Over tightening can cause to premature thread failure or high pressure fittings to split at a pressure lower than their rated capacities.
5. Should any hydraulic hose rupture, burst, or need to be disconnected, immediately shut off the pump. Never attempt to grasp a leaking pressurized hose with your hands. The force of escaping hydraulic fluid could cause serious injury.
6. Do not use the hose to remove attached equipment. Stress can damage the hose, causing personal injury.
7. Do not subject the hose to potential hazard such as fire, sharp surfaces, extreme heat or cold or heavy impact. Do not kink, twist, or bend the hose so tightly that oil flowing in the hose is blocked or reduced. Periodically inspect the hose for wearing, because any of these conditions can damage the hose.
8. WREN JH series 100 mpa high pressure hose's operating pressure is 100 mpa, Overpass this pressure is forbidden.

## AFTER-SALES SERNICE

1. WREN guarantees quality of the material used for manufacturing products and quality of your technical fulfillment. The guarantee period of the products is 12 months from the date of selling.
2. If any quality issue due to the defects of the materials or craftsmanship is found within the guarantee period. WREN will be responsible and repair or replace the defective products for free.
3. If the equipment is damaged because of happenstance, wrong operating and modifying or repairing the parts without consulting WREN's technical service department, WREN will not guarantee these cases.


## PNEUMATIC PRINCIPLE

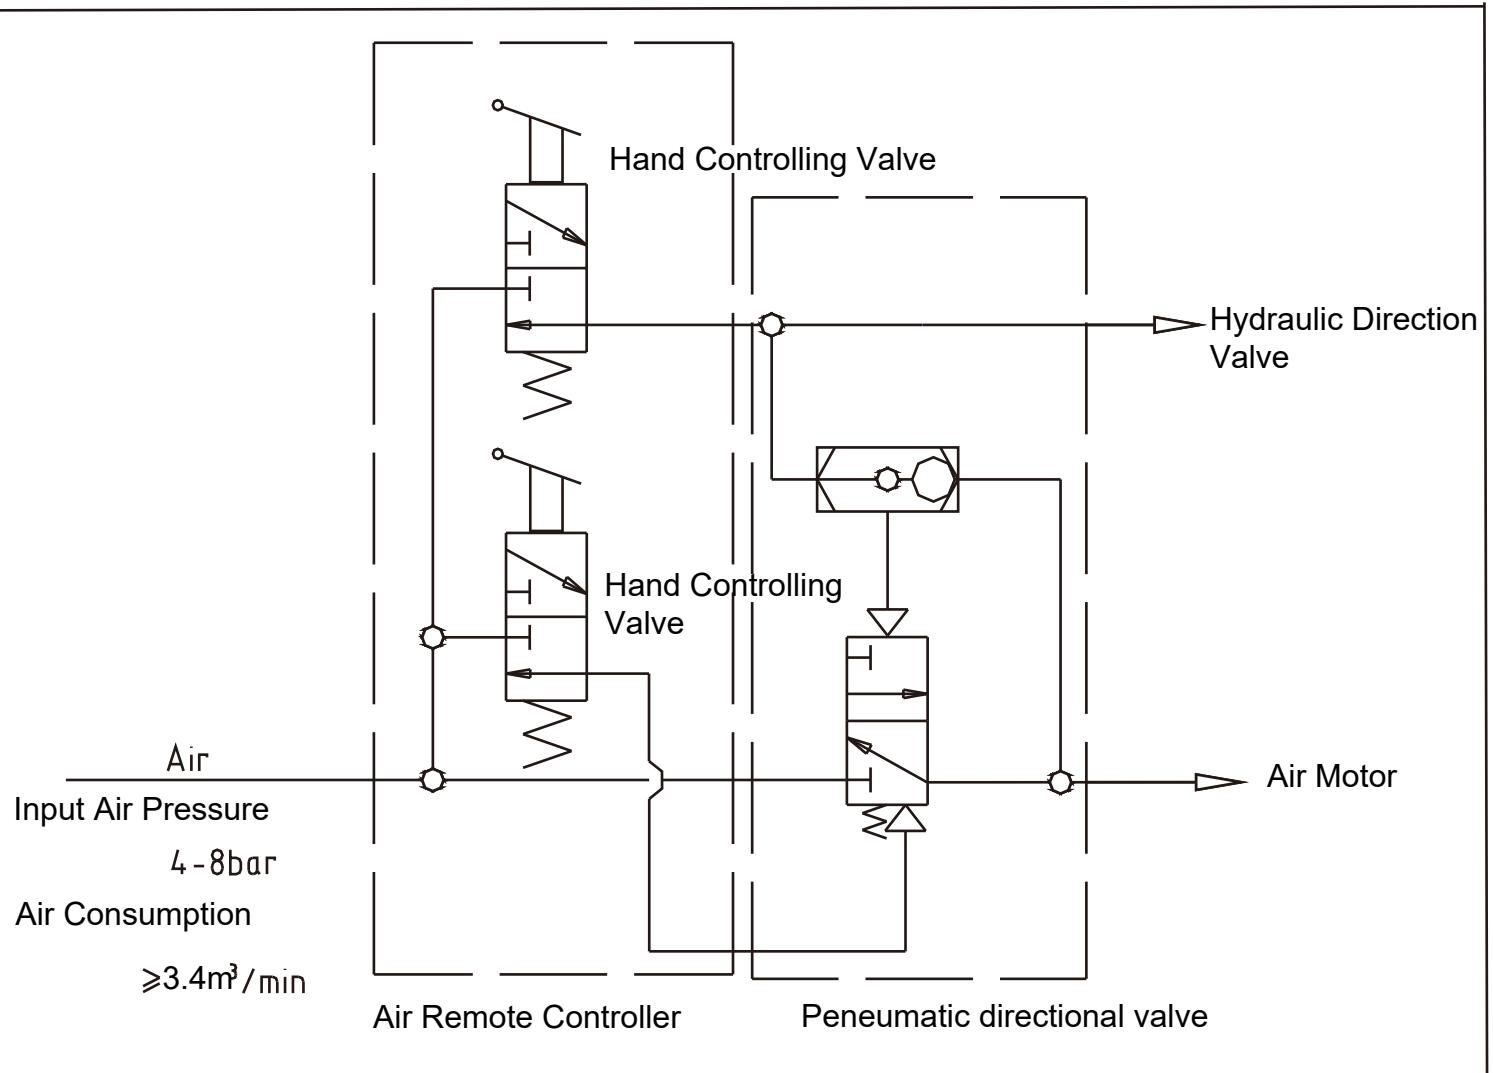

Name	Specification	Remark
Pneumatic directional valve	HXQ01	
Air Remote Controller	QB02	
Hand Controlling Valve	MJV-3C	
Hand Controlling Valve	MJV-3C	

## Specification & Parameter

Model	Oil capacity (L)	Control valve	Air Motor	Power (HP)	Flow (L/min)			Oil outlet connecting thread	oil retrun port connecting thread	Maxwork pressure (Bar)
					Low	Mid	High			
LP3-N-2	5.5	Pneumatic	<p><b>Rotate Speed:</b> 3000r/min Pressure</p> <p><b>Output:</b> 4~8 bar</p> <p><b>Air Consumption:</b> ≥ 3.4m3/min</p>	3.0	8.6	2.2	1.1	NPT1/4	NPT1/4	700
LP3-N-4	5.5	Pneumatic	<p><b>Rotate Speed:</b> 3000r/min Pressure</p> <p><b>Output:</b> 4~8 bar</p> <p><b>Air Consumption:</b> ≥ 3.4m3/min</p>	3.0	8.6	2.2	1.1	NPT1/4	NPT1/4	700

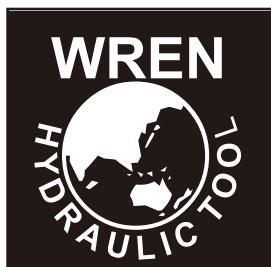

All WREN products are guaranteed against defects in workmanship and materials for as long as you own them. Under this guarantee, free repair or replacement will be made to your satisfaction.

RECYCLED  
PAPER



# LP3-N系列液压扳手专用气动泵

## 操作和维护手册



### 雷恩液压

本操作手册内容包括LP3-N液压扳手专用气动泵的操作规程、警告和注意事项以及故障排除。使用前，请仔细阅读本手册，彻底理解其内容并妥善保管。

#### 安全指示

液压气动泵的安全使用，必须要求正确操作和定期检查。

在阅读和彻底理解本手册中的安全指示条例后才可以使用本气动泵。

▲注意事项—防止造成直接经济损失或财物损失。

▲警告事项—防止造成人身伤害。

请确实遵守上述两个事项。

在使用过程中，如发生异常情况，请关闭气源，拔出气源接头，然后向WREN或WREN授权代理商咨。

1. 使用本气动泵时，所有人员禁止站在液压油出口处，防止液压油不小心泄漏时可能发生的人身伤害或财产损失；气动泵必须远离火源。
2. 加压前，应加装软管或快速接头，防止高压液压油冲出造成人身伤害。
3. 本液压气动泵的最高工作压力为70Mpa；在出厂时工厂已设定压力为70Mpa。绝不要将压力调节到超过设定压力。
4. 如本气动泵用于操作其它配套设备，配套设备的工作压力应小于70Mpa，并将压力调定为其配套设备的工作压力，否则配套设备有可能损坏；调整压力调节阀的操作参见第六、七项。
5. 充分考虑安全性，在维修前，应将电器设备的电源切断。
6. 在插上电源前，关掉按钮开关；如果开着开关，压力会增加。
7. 确保接地，避免触电。
8. 不要改装本气动泵；如确实需要改装，应先向WREN 或WREN授权代理商咨询。没有WREN的书面同意，所作改装，不在质保范围内。
9. 不要加注超过可用油量的液压油，否则，贮油箱中的压力会增加或溢出，贮油箱有可能损坏、会造成对环境的污染。
10. 扳手及液压泵之间是由工作压力均为700bar 的钢丝编织的复式油管连接的。每根油管的两端均有凹接头以及凸接头，以保证泵与扳手之间的正确连接。不得随意变动旋转接头上的任何螺栓。这是厂家为了安全而设定的。只有受过专业培训者才能去调节。
11. 拧紧快速接头；如果拧的不够紧设备不会正常工作；如果在同步系统中，会造成其中一台或多台设备不能正常工作。如果出现这种情况，快速接头、设备可能损坏，可能会造成人身伤害。
12. 远离超高压液压油可能喷出的位置；液压油可能穿透你的手，导致严重受伤。
13. 如果液压油喷到你的眼睛里，立即用清水冲洗大约15分钟，然后去医院洁眼睛。
14. 不要碰带压力的软管；如果液压油喷出，会导致严重伤害。

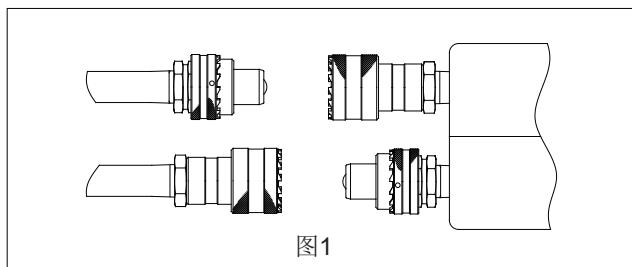


图1


## 注意事项

1. 只使用WREN液压工具专用油。
2. 不要将压力调节阀当作一般的调整阀或释放阀使用。
3. 要按照防污调理处理使用过后的废旧液压油

## 注意事项

- 1 LP3-N为液压扳手专用泵采用集成方式组装；由油泵、控制阀、油箱、气动马达、冷却器、仪表等组成的一种独立完整的液压装置，具有体积小、重量轻、结构简单、操作方便、工作压力高等特点。泵为高、低压油泵同时供油，可获得较大的输出油量。高压时，低压泵经卸荷溢流阀自动空载回油，可减少功率消耗，并且（A）口出油压力可70~700Bar任意调节。
- 2 液压气动泵使用的液压油：46#耐磨液压油。
- 3 液压气动泵使用的环境温度：-10~60° C
- 4 请使用WREN高压软管、高压接头等。WREN液压气动泵配用的高压软管最大工作压力为100Mpa，使用时请选用与之配套的压力系统。
- 5 此泵如需使用附属液压产品，请咨询WREN公司工程师。
- 6 请不要在靠近火焰处使用液压气动泵。
- 7 请不要任意调节压力调节阀，以避免超高压引起的设备损坏和人身伤害。

## LP3-N气动液压泵外 观尺寸零部件概述

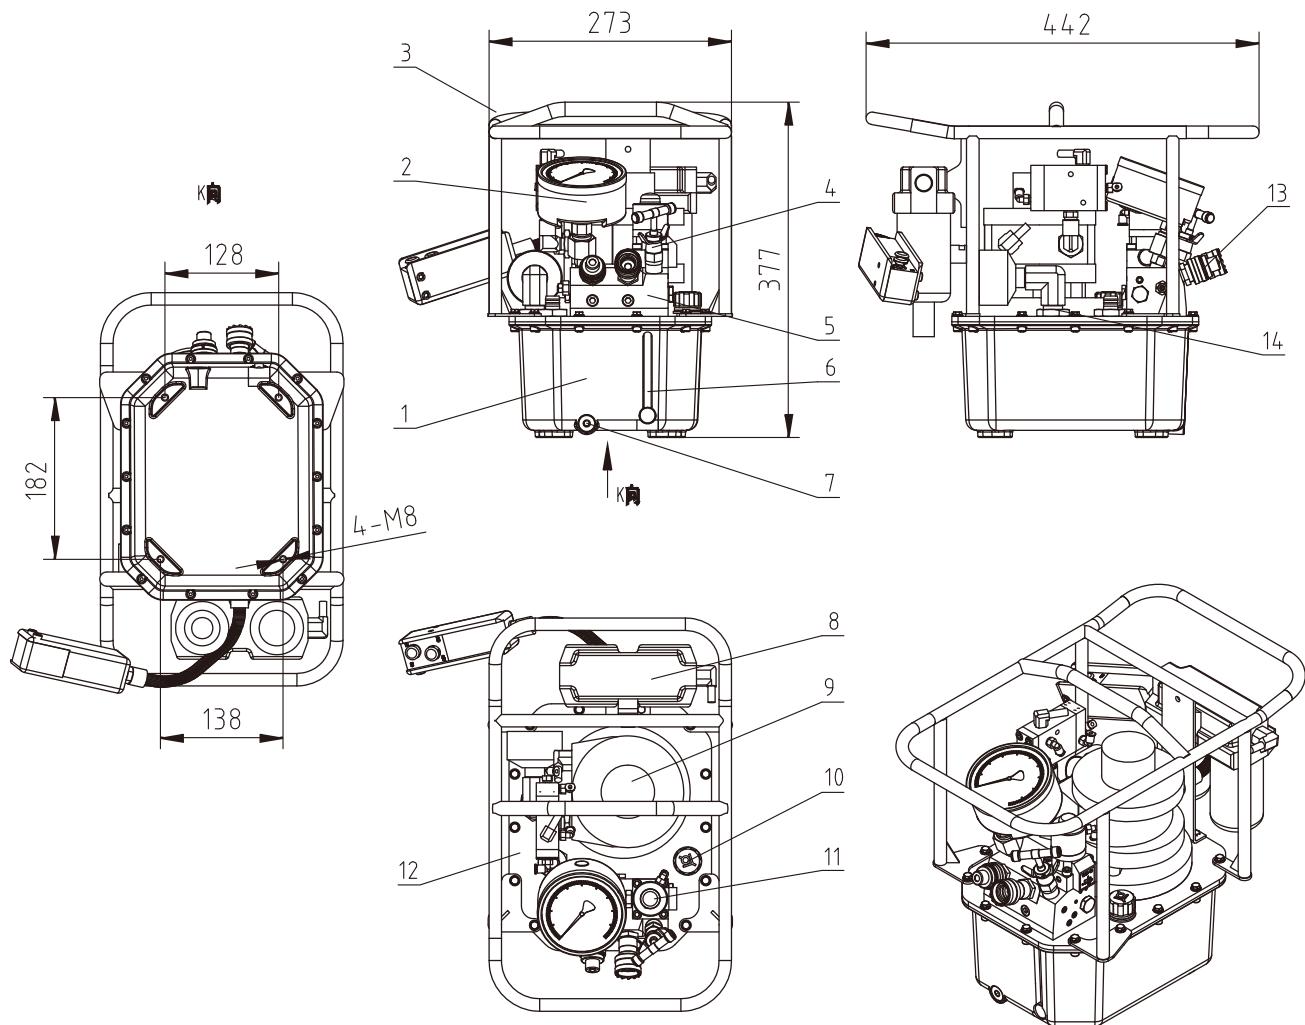

序号	说明	序号	说明
1	储油箱	8	油水分离器
2	压力表	9	气马达
3	保护架	10	通气注油孔
4	调压阀	11	二位三通气动换向阀
5	阀组	12	油箱盖
6	液位计	13	快速接头
7	卸油孔	14	冷却器

## 零部件概述

- 1 储油箱：存放工作用液压油，保证系统正常工作(必须有足够的油量)，提供系统所需的压力载体。
- 2 压力表：显示液压泵的工作压力，量程100Mpa。
- 3 油泵保护架：安装在储油箱上，用于提携、保护液压泵站。
- 4 调压阀：调节此阀可以设定液压泵的工作压力，(出厂时已锁定最高工作压力，禁止调高锁定压力)。
- 5 阀组：集成模块
- 6 液位计：观察液压油的多少，以保证提供最佳使用油量；液压油低于油标1/3位置时，必须加WREN泵站专用液压油，否则可能会损坏泵站。
- 7 卸油孔：螺塞G1/4"，实现液压油排出储油箱(更换液压油时使用)。
- 8 油水分离器：去掉压缩空气中水分，让马达增加润滑油，使马达寿命加长
- 9 气动马达：提供动力源。
- 10 通气注油孔：实现液压油排出储油箱(更换液压油时使用)；油盖设计有通气孔功能，注油时拧开油盖，内有过滤网保证无杂质进入油箱；拧紧油盖后确保系统中的空气顺利排出。
- 11 二位三通换向阀：气动控制使液压油路换向
- 12 油箱盖：密封油箱。
- 13 快速接头：实现液压油输出\回油功能，快速连接油管；内置式单向阀；
- 14 冷却器：实行强制冷却，降低油泵工作时的油温，从而延长扳手工作时间和使用寿命。

## 特性

1 LP3-N是三级泵。高压出口设有高压溢流阀，低压出口设定压力为5~7Mpa，中压出口设定为24~26Mpa，在70Mpa状态下流量为1.1L/m。

2 最大操作压力：70Mpa

3 流量：该泵为双作用，即可同时使用两部扳手。

4 气动马达：工作气压4~8Bar

5 使用温度：-10 ~80°C

6 储油箱规格（油箱型号）：442×273×377

7 重量扳手专用LP3-N：20.5Kg

8 液压油：ISO VG 46#

在使用一组扳手时，必须将另外一组快速接头盖紧金属帽。

## WARNING!!!

1 使用时，泵站高压油输出口处禁止站人，调压时输出口必须连接其他元件；

2 泵站使用时，禁止随意调高超出本泵的最大工作压力，否则会造成泵站的损坏；

3 需要检查气动马达时，必须切断气源输入；

4 泵站工作时，返回储油箱的油可能会增压；如果此时打开储油箱盖可能会造成不必要的损伤和伤害；

5 禁止无油启动泵站，这将会造成泵站损坏；

6 必须保持液压泵站的清洁，特别是注油口、快速接头等处，由于液压油的不清洁，是引发泵站的故障的主要原因；

7 建议：液压油一年必须更换一次（不经常使用状态下）。

## 警告标志

警告标志如下表所示

## 保养检查

### 1. 使用前检查事项

1.1 检查气源连接线部位是否有松脱、连接不良的情况，如发现气源接线部位有松脱现象，应将松脱的部位拧紧。

1.2 请检查液压油的油量是否达到规定的值，不足时请即时添加。

1.3 切换方向控制阀时机具做功，加压检查有无异常。

1.4 检查配管或设备是否有漏油现象，如有此类现象发生，请查明原因并对此进行处理。

### 2. 操作中的检查事项

在检查下列项目中，如果发现有异常情况，请立即停机，处理故障

2.1 在升压过程中是否有异常情况。

2.2 配管及设备是否有漏油现象。

2.3 气动马达在工作中是否有异常噪声、振动及异味。

2.4 液压油是否温度过高。

### 3. 操作后的检查事项

3.1 必须切断气源。

3.2 检查是否有漏油或者其他异常情况。如果有异常情况发生，请查明原因并进行处理。

3.3 使用后请进行清理。

### 4. 关于更换液压油

液压油原则上应每年更换一次。如出现下列这些情况，请立即更换。

4.1 灰尘进入时。

4.2 有异味时。

4.3 有水进入时，使油液呈现出乳白色。

4.4 油劣化显现出黑褐色时。

### 5. 液压油更换方法

5.1 松动打开气动泵上的通气注油盖。

5.2 取下油箱侧面的螺钉，使液压油流出。

5.3 清洁油箱内部及吸入口的过滤网。安装排油口的螺钉，将油加入油箱。

**警告：**如果油液溅到您的眼睛里，应立即用清水冲洗至少15分钟，冲洗完毕后应立即去看医生。如果油液飞溅到您的皮肤上，请用清水和肥皂清洗。

**警告：**废弃的液压油属于工业废料，应委托具有收集和处理工业废料的公司处理。

## 噪音及运输


### 1、LP3-N系列泵噪音/振动声明

LP3-N使用噪音值: ≤70db


### 2、LP3-N系列泵运输信息

2. 1、搬运时注意轻拿轻放。

2. 2、装运时应将产品立式向上，如下图所示。

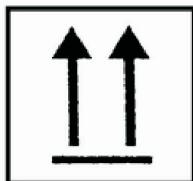

2. 3、产品搬运一般采用手提式或小车搬运移动、吊装移动，如下图所示。

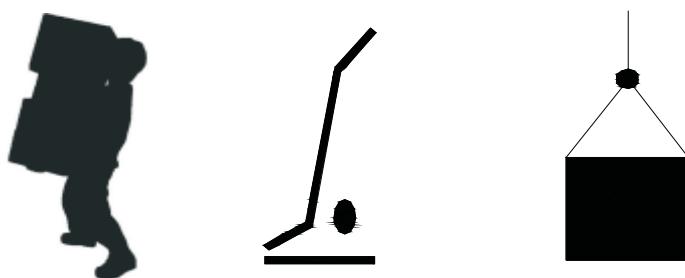

## 操作方法（压力调整）

### 1. LP3-N液压扳手专用液压泵

LP3-N是带有二位四通的气动控制阀，专为液压扳手设计泵。A口为高压进油，R口为低压回油。

2. 操作前，请松开压力调整阀。


3. 接通气源，打开进气阀门，按下线控上的开始键，使泵工作，液压油处于输入状态。

4. 按住线控开关上的工作按钮不放，同时调整泵上的压力调整阀，直至所需压力为止，然后松开线控开关上按钮。

5. 但压力上升到压力开关的设定压力时，马达停止做功，压力将保持其设定的压力。当压力下降时，马达重新工作。

6. 当马达在运行时，按下线控开关上的开始按钮，马达停止工作。压力和活塞也将固定马达停止工作的位置。即便压力下降，马达也不会再启动。


7. 操作结束后，请按下气动控制阀顶端的橡皮按钮（压力释放阀），以卸去存在管内及机具内剩余压力，再拆下高压软管，分别拧上安全帽。

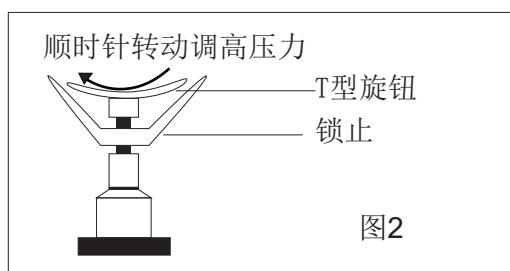

## 液压泵的故障排除


无法启动泵站	气源气压不符	确定气源气压是否符合泵站规定要求
	气源未接通	检查气源、气源连接部等，接通气源
系统无压力	快速接头未接到位	拆开，重新安装
	贮油箱内无油	加注油
	贮油箱内油量不足	加注油
	系统带有节流阀、手动单向阀的，检查阀是否打开	打开节流阀、手动单向阀，确定系统为通路状态
重装快速接头，系统无压力	快速接头无法接到位，引起系统内敞压	拆开快速接头，用顶杆检查快速接头钢球是否有弹性，如顶不动，用小锤敲击钢球，使雾状液压油排尽
快速接头处漏油	快速接头偏?型圈、挡圈磨损	更换快速接头
系统压力达不到额定压力	溢流阀调整得过低	压力表检测，溢流阀调至系统额值
	水油混合	换油
	贮油箱内油量不足	加注油
	吸入空气	系统反复空运转数次，排尽空气
	节流阀、手动单向阀未关紧	锁紧阀
	节流阀、手动单向阀未调整到位	调整至正确位置
	节流阀、手动单向阀损坏	更换阀
液压油中含有杂质		清洗泵站阀块并更换清洁液压油
静压使用时，压力缓慢下降	密封失灵，检查各密封处	更换密封件

## 泵体模块爆炸图

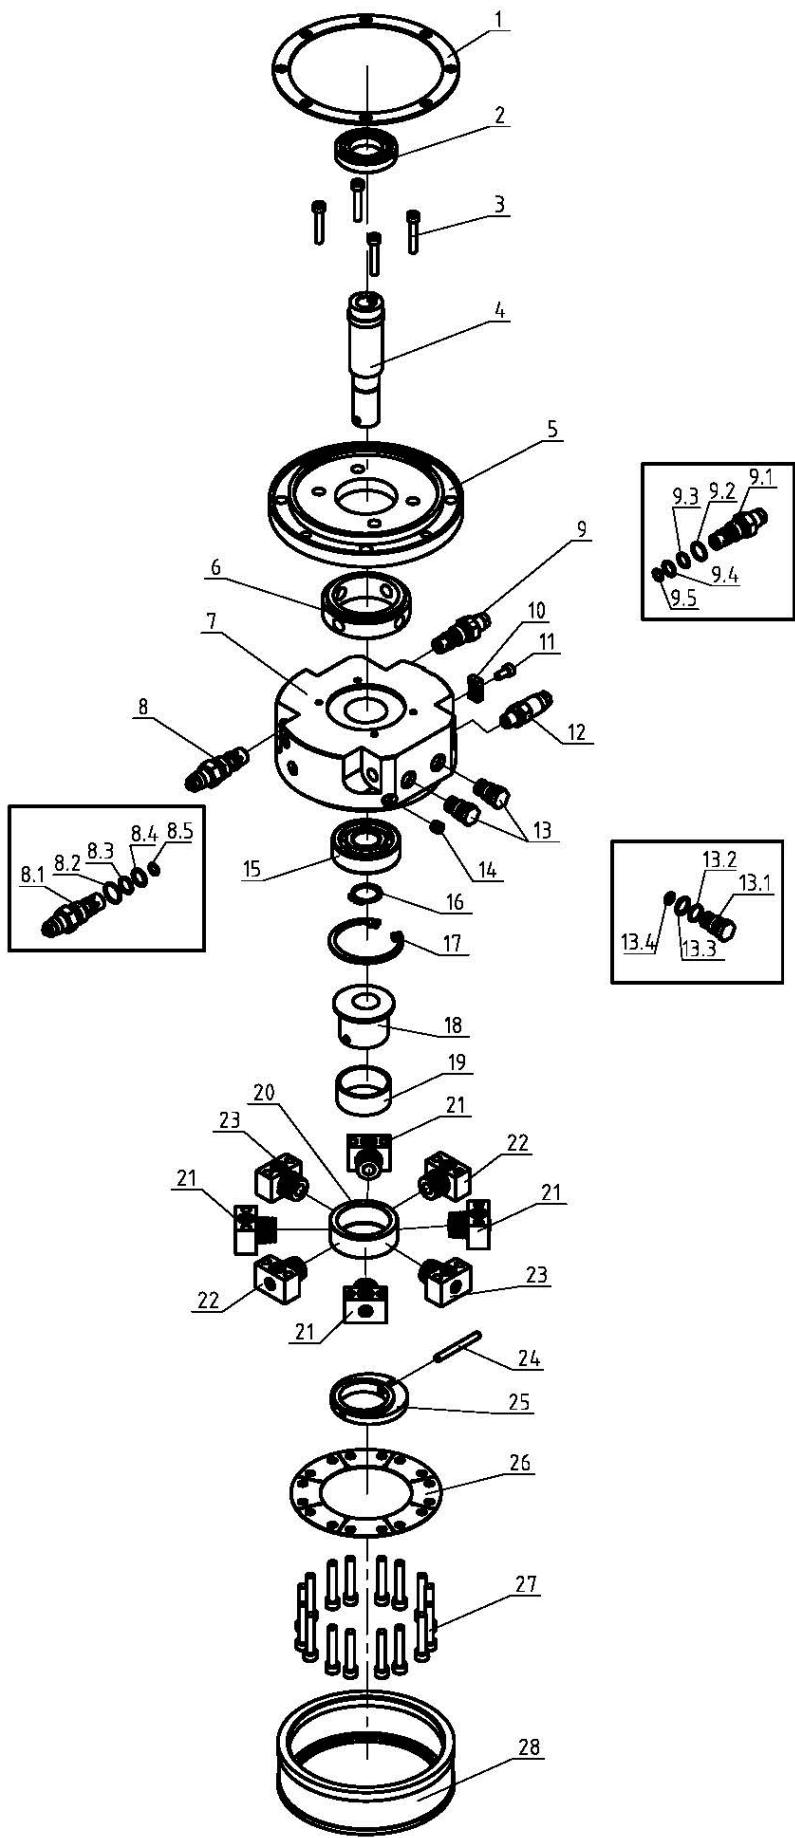


序号	名称	数量
1	密封垫	1
2	深沟球轴承	1
3	内六角螺钉	4
4	泵轴	1
5	泵体法兰	1
6	泵体套	1
7	分离式泵体	1
8	低压卸荷阀	1
8.1	阀体	1
8.2	0型圈	1
8.3	挡圈	1
8.4	0型圈	1
8.5	0型圈	1
9	中压卸荷阀	1
9.1	阀体	1
9.2	0型圈	1
9.3	挡圈	1
9.4	0型圈	1
9.5	0型圈	1
10	滤网压板	1
11	内六角螺钉	1
12	超压阀	1
13	单向阀	2
13.1	阀体	2
13.2	挡圈	2
13.3	0型圈	2
13.4	0型圈	2
14	堵头	12
15	深沟球轴承	1
16	轴用弹性挡圈	1
17	孔用弹性挡圈	1
18	偏心套	1
19	铜套	1
20	轴承外圈	1
21	柱塞12mm	4
22	柱塞7mm	2
23	柱塞7mm	2
24	弹性圆柱销	1
25	偏心块	1
26	连接片	1
27	内六角螺钉	16
28	过滤罩	1

# WE 型阀组模块爆炸图

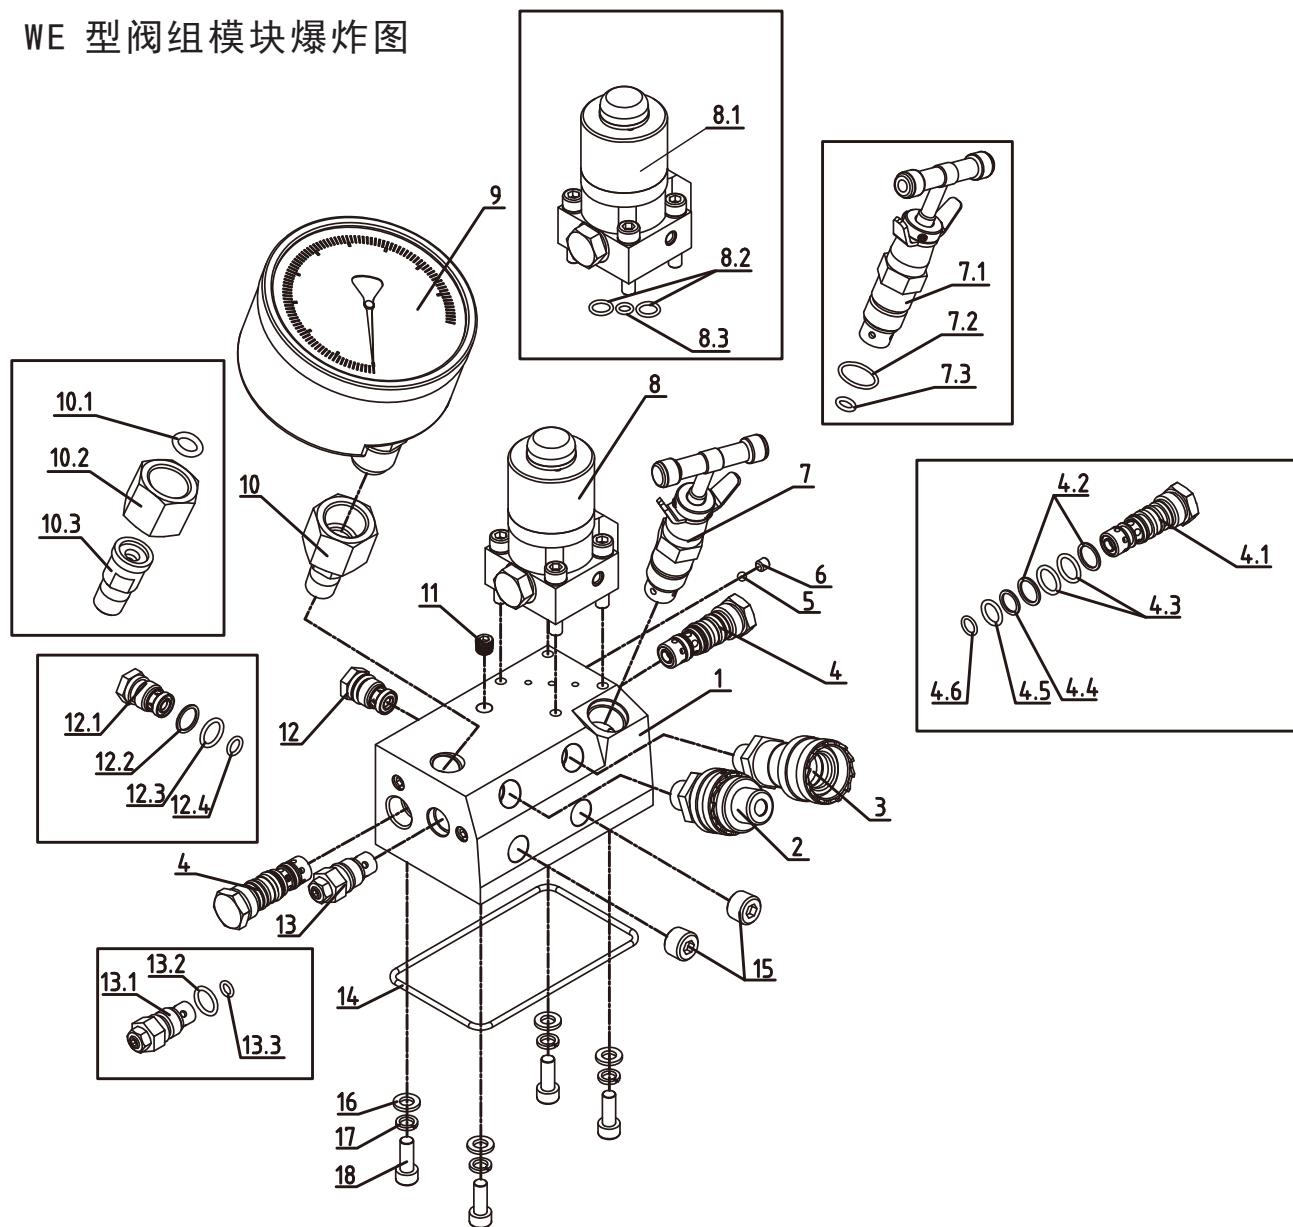


序号	名称	数 量	序 号	名 称	数 量
1	WE型连接块	1	9	压力表100MPa	1
2	凸接头	1	10	压力表接头	1
3	凹接头	1	10.1	O形圈	1/套
4	先导换向阀	2	10.2	压力表接头(二)	1/套
4.1	阀体	1/套	10.3	压力表接头(一)	1/套
4.2	挡圈	2/套	11	堵头	13
4.3	O形圈	2/套	12	单向阀	1
4.4	挡圈	1/套	12.1	阀体	1/套
4.5	O形圈	1/套	12.2	挡圈	1/套
4.6	O形圈	1/套	12.3	O形圈	1/套
5	钢球	5	12.4	O形圈	1/套
6	内六角紧定螺钉	5	13	低压调压阀	1
7	高压调压阀	1	13.1	阀体	1/套
7.1	阀体	1/套	13.2	O形圈	1/套
7.2	O形圈	1/套	13.3	O形圈	1/套
7.3	O形圈	1/套	14	O形圈	1/套
8	二位三通气动换向阀	1	15	堵头	2
8.1	阀体	1/套	16	平垫圈	4
8.2	O形圈	2/套	17	弹簧垫圈	4
8.3	O形圈	1/套	18	内六角螺钉	4

## 气动泵手柄示意图

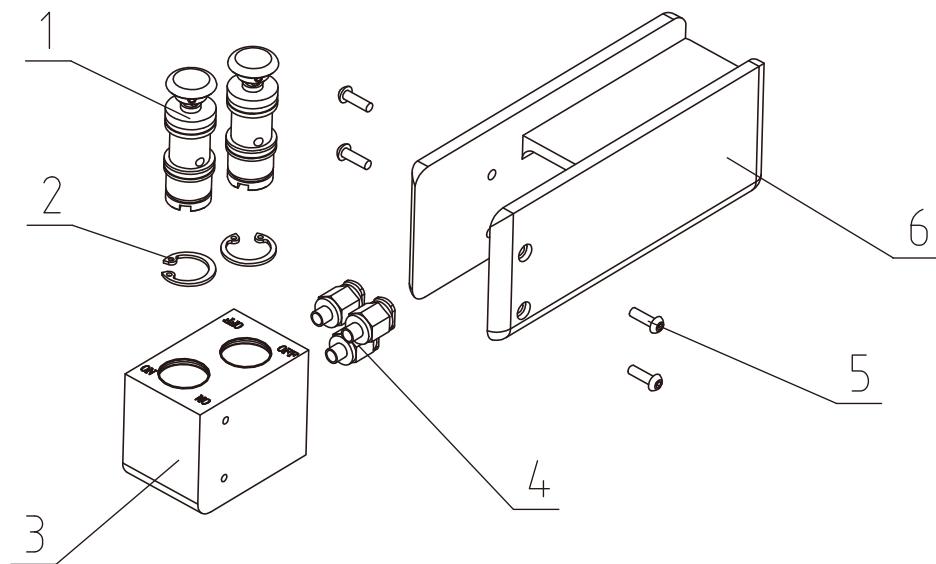

序号	名称	数量	序号	名称	数量
1	气动按钮	2	4	快插接头	3
2	孔用卡簧	2	5	螺钉	4
3	阀体	2	6	手柄	1

## 液压原理图

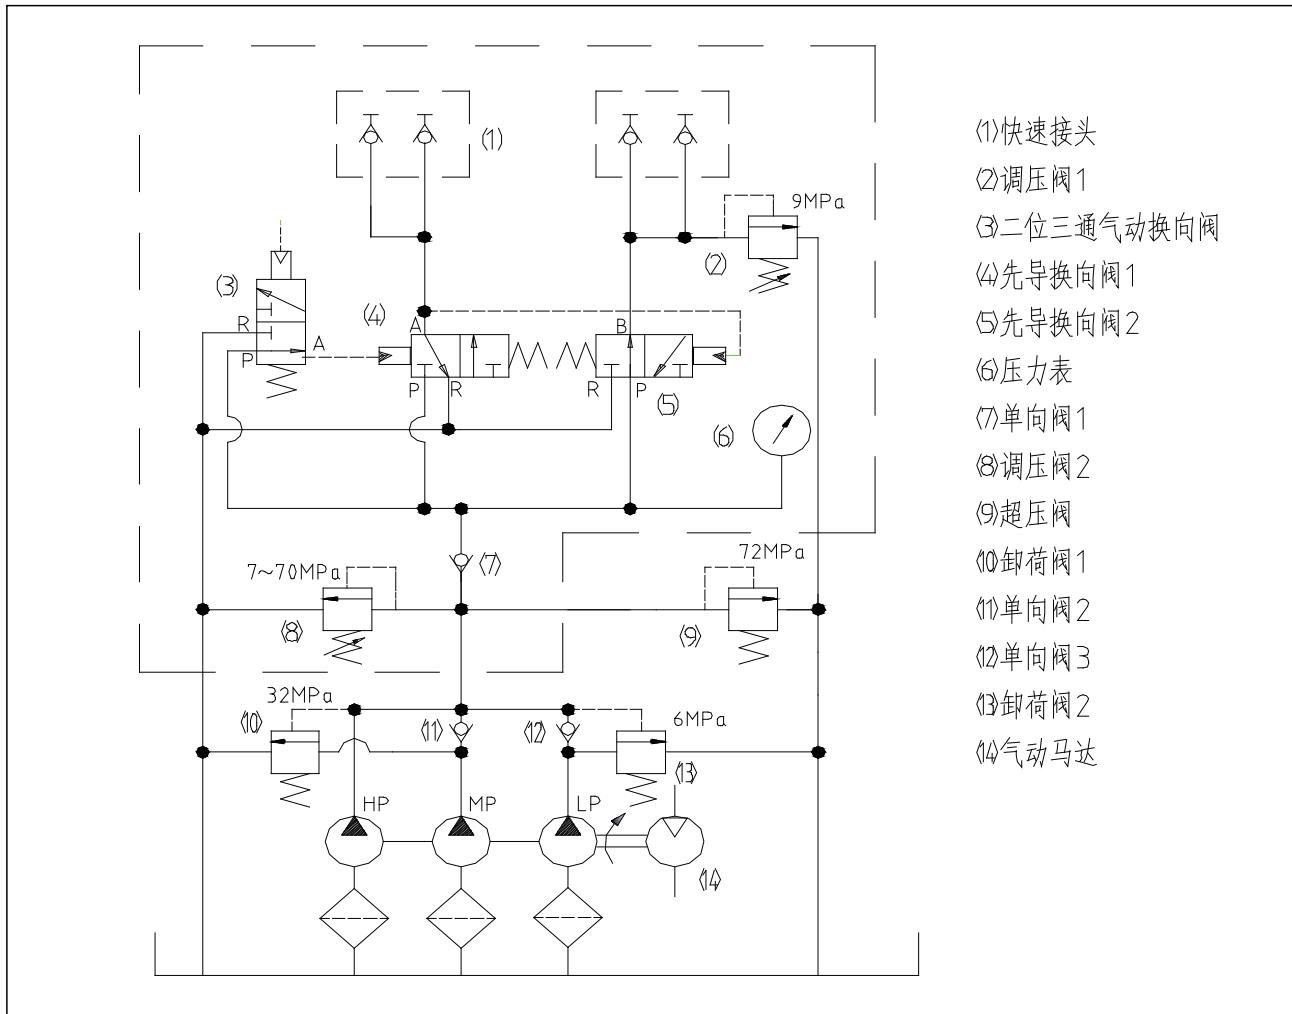


## 高压软管使用警告

1. 适用于WREN JH系列等级的高压软管。
2. 最小弯曲半径:  $R > 120\text{mm}$ 。过小的弯曲半径, 将严重损坏高压软管。
3. 操作压力为70Mpa, 禁止超压使用。
4. 操作中不得使软管缠绕, 否则会使油管产生过大的背压, 使软管内部损坏, 软管过早报。
5. 不得将重物掉到或压到软管上; 严重冲击可能引起软管损坏, 使用时将会暴裂, 并引起人身伤害。
6. 不得用软管拖、拉、吊起重物。
7. 禁止在过热、火焰、机器碾轧、利刀和化学腐蚀等条件环境下使用。软管布置在通道上时, 必须加装盖板。
8. WREN JH系列100Mpa等级高压软管操作压力为100Mpa, 禁止超高压使用,

## 售后服务

1. 自客户购买WREN品牌液压机具产品之日起, WREN公司为用户提供十二个月的保质期。
2. WREN产品在保质期, 内因材料、制造缺陷引起质量问题, 由WREN公司免费便换、维修。
3. 因工作状况不符合规定、意外事故、滥用、操作不当、未经受权的产品改装或修理以及不按规定操作而引起的产品损坏, 不属本保修范围。

## 气动原理图

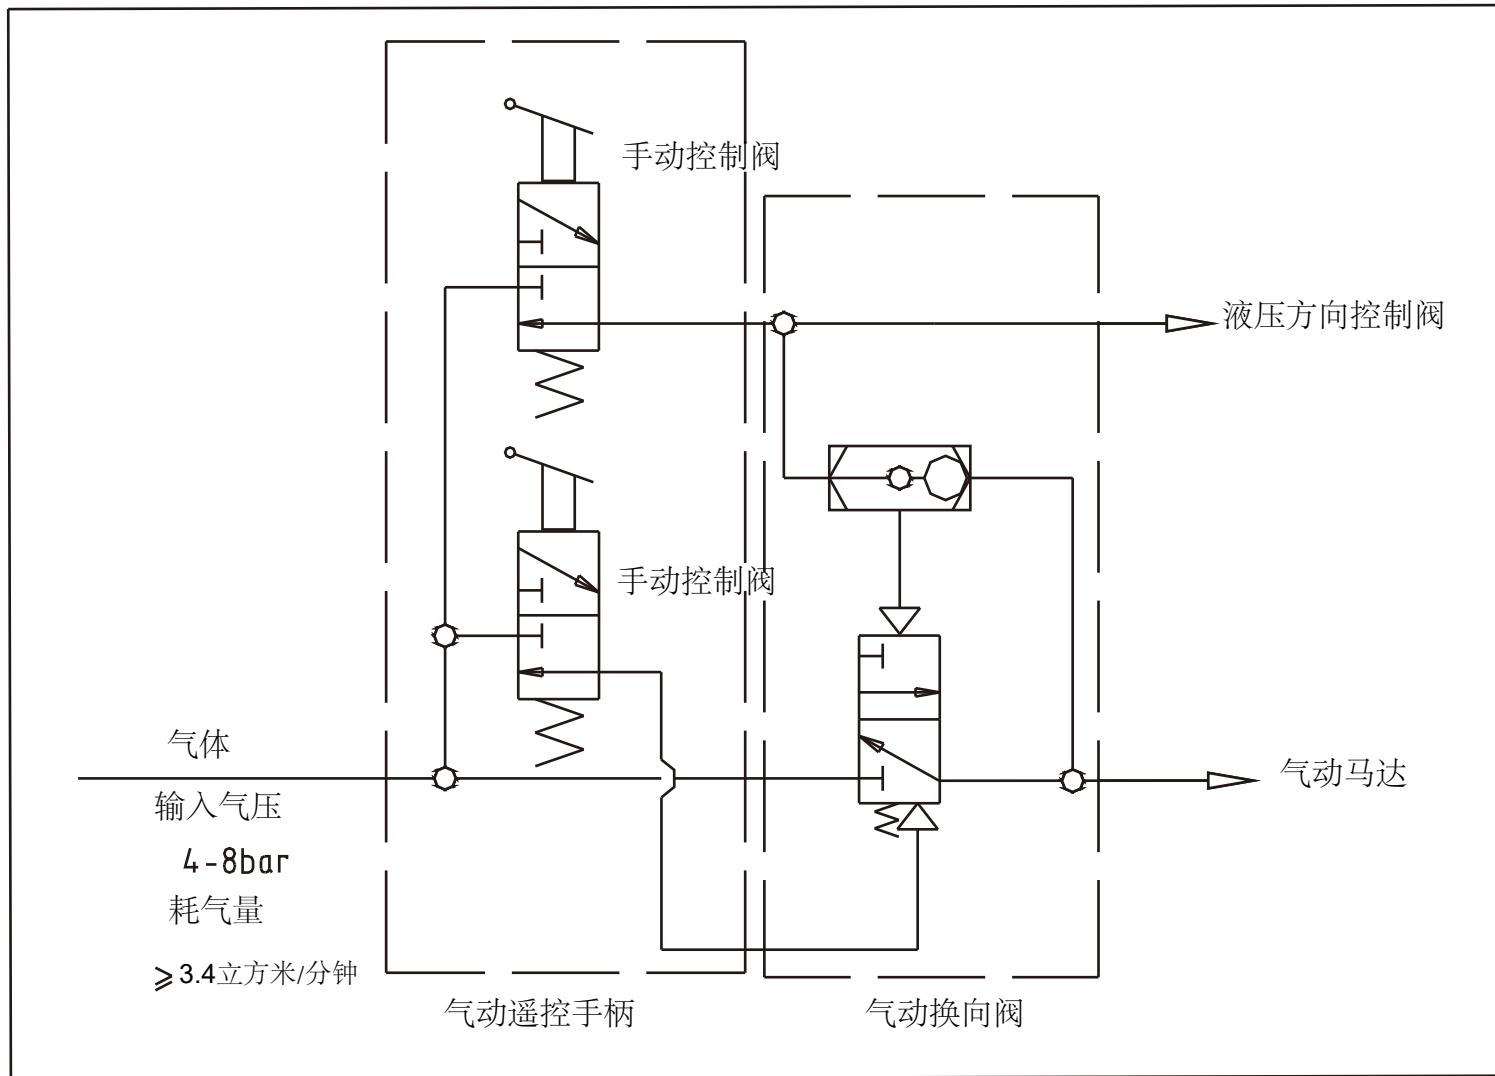

名称	规格	备注
气动换向阀	HXQ01	
气动遥控手柄	QB02	
手动控制阀	MJV-3C	
手动控制阀	MJV-3C	

## 气动泵型号参数表

型号	油箱容 积 (L)	控制阀	气动马达 (转速/输入输出气压)	功率 (kW)	压力 (L/min)			出油接口	回油接口	最大工作 压力 (Bar)
					低压	中压	高压			
LP3-N-2	5.5	气控	转速: 3000r/min 输出气压: 4~8bar 气体输入流量: ≥3.4m³/min	3.0	8.6	2.2	1.1	NPT1/4	NPT1/4	700
LP3-N-4	5.5	气控	转速: 3000r/min 输出气压: 4~8bar 气体输入流量: ≥3.4m³/min	3.0	8.6	2.2	1.1	NPT1/4	NPT1/4	700



所有雷恩产品都确保无工艺和材料上的缺陷，只要你拥有它。  
在此担保下，我们将在产品售出后一年时间内为您提供免费  
维修或更换服务。

[www.wrenchina.com](http://www.wrenchina.com)

可回收纸 